Process Analytics

Fittings and Controllers

ARF 203 Flow-Through Fitting

Flow-through fitting with G 1 ¼" threaded coupling (25 mm / Ingold socket)

ARF 203 flow-through fitting with G 1 1/4", Ingold (25 mm) sensor location for use with SensoGate WA 130 and WA 131(M) retractable fittings, for combination with the ARI 106 (H) inline fitting or for use with sensors such as the SE 605 (H) conductivity sensor. High-quality 1.4571 stainless steel enables the fitting to be used at high pressures and temperatures. In the Hastelloy C22 variant, it is also suitable for highly complex chemical processes.

Applications

Material stainless steel 1.4571: pH, conductivity and oxygen measurement in ultrapure water, slightly polluted water, cooling water, drinking water; trace-oxygen measurement in boiler feed water

Material Hastelloy C22: Increased chemical resistance for corrosive or aggressive process media.

Facts and Features

- Stainless steel 1.4571 or Hastelloy C22
- For sensors with a G 1 1/4"/ 25 mm connection (Ingold socket)
- For SensoGate WA 130 and WA 131 (M) retractable fittings
- For use with the ARI 106 (H) inline
- Flow direction 90° or 180° (adjustable with screw plug)
- Process connection via G 1/4" female thread




Material: Stainless steel 1.4571 / Hastelloy C22

Pressure: Max. 25 bar Gasket material: -20 ... 160 °C Temperature:

Sensor location: 1 x G 1 1/4" / 25 mm (Ingold socket)

Process connection: G¼" 90°: stainless steel 1.4571 / Hastelloy C22 G¼" 180° staggered: only stainless steel 1.4571

Pressure/Temperature Diagram

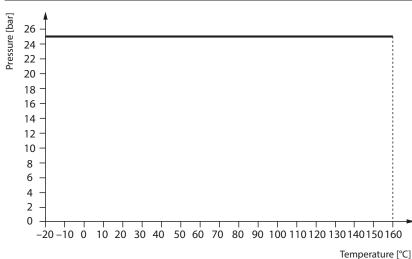





ARF 203 Flow-Through Fitting

Modular System

The ARF 203 flow-through fitting has a sensor location for G 1 ¼" (25 mm) couplings.
These device configurations are possible:




Product Range


Fitting		Order No.
ARF 203 flow-through fitting	G 11/4", steel 1.4571, G 1/4" female thread	ARF 203
(including wall holder)	G 1¼", Hastelloy C22, G ¼" female thread	ARF 203/HC22


Process Analytics

Fittings and Controllers

Dimension Drawings

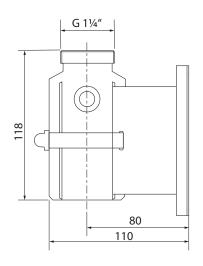

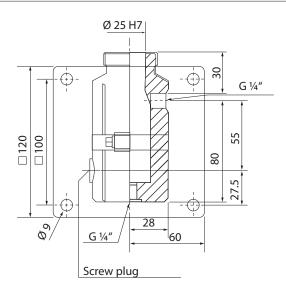

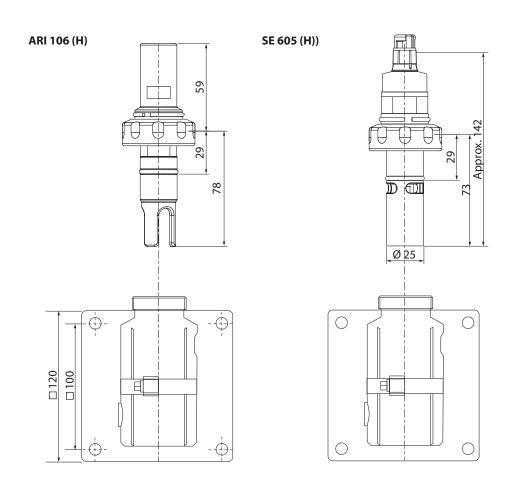

All dimensions in mm.



ARF 203 Flow-Through Fitting

Dimension Drawings – Continued

